

Ceiling mount bracket for vandal dome, vandal ball and vandal fisheye cameras

DWC-VACM	DWC-VFCMW	DWC-VFZCM
----------	-----------	-----------



WHAT'S IN THE BOX

Camera Mounting Screws		M3.0x 20mm with Rubber Gasket	5 sets	Mounting Pad		1
		M3.0x 23mm		Mounting Template		1
		M3.0x 35mm		Quick Setup Guide		1
Hexagonal Wrench			1	Screws and Plastic Anchors		4

NOTE: Download all your support materials and tools in one place.

1. Go to: <http://www.digital-watchdog.com/resources>
2. Search your product by entering the part number in the 'Search by Product' search bar. Results for applicable part numbers will populate automatically based on the part number you enter.
3. Click 'Search'. All supported materials, including manuals and quick start guide (QSGs) will appear in the results.



INSTALLATION

- 1 Using the mounting template or the mounting bracket itself, mark and drill the necessary holes on the mounting surface.
- 2 Secure the mounting bracket to the mounting surface using the screws and anchors that were included with the mount. Use the mounting pad between the bracket's arm and mounting surface as needed.
- 3 To mount the camera to the mounting accessory, remove the dome from the camera base using the wrench included with the camera.

NOTE: Do not touch the lens when handling the camera.


- 4 Pass wires through and make all necessary connections.
- 5 Secure the camera to the mounting bracket using the included screws. See the table below for the length of the screws and compatible cameras.

Screw size	Compatible camera	Installation Option
20mm screws 	DWC-MV8 and DWC-MPV8 models DWC-MVC and DWC-MPVC models DWC-PVF and DWC-PPVF models DWC-MF and DWC-MPF models	Installation option A/B*
23mm screws 	DWC-VA models DWC-MVA models DWC-MPVA models	Installation option B
35mm screws 	DWC-MVD and DWC-MPVD models	Installation option A

- 6 Adjust the camera's lens position and angle and place the cover dome on the camera base to complete the installation.

*** NOTE: How to tell what MF, V8 or PVF hardware you have:**
 If the camera's mounting holes are located on the outer edge of the camera's base, use the 20mm screws WITHOUT the rubber gaskets and installation option A.
 If the camera's mounting holes are located on the inner edge of the camera's base, use the 20mm screws with the rubber gaskets included and installation option B.

For type B installations
 Ø3.5" (Ø89mm)

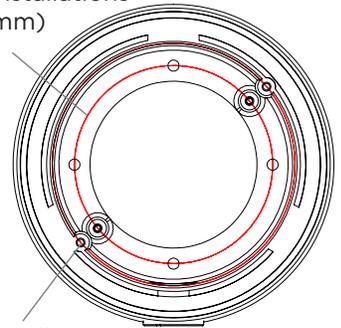

For type A installations
 Ø4.29" (Ø109mm)

